

Airius PureAir PHI Model 45/PS-4 Product Information Sheet

45/PS-4-PA-230V

Page 1 of 3



DIMENSIONS



PUREAIR PHI STANDARD SERIES RANGE - MODEL 45/PS-4

DESCRIPTION

- Air purification and odour control destratification and airflow circulation fan.
- Features integrated Photohydroionization (PHI) Cell.
- Creates aggressive advanced oxidation atmosphere.
- Floods spaces with airborne hydroperoxides, superoxide and hydroxide ions.
- Broad spectrum HE/UV light targeted on a quad metallic target producing hydroperoxides.

FEATURES

- Kills surface Germs, Bacteria & Viruses by 99%+.
- Kills airborne Germs, Bacteria & Viruses by 97%+.
- Reduces Odours by 99%+.
- Reduces VOCs, gases & Vapours by 80%+.
- Balances internal building temperatures.
- Saves 20% 50% on heating & cooling costs.

CELL PERFORMANCE

• 25,000 hours (3 yrs) estimated life of continuous runtime.

PROPERTIES

щ		Standard
UNIT SIZE	Weight:	6.3 kgs (14 lbs)
	Height to Rim:	455 mm (18 in)
	Total Height:	605 mm (24 in)
\mathbf{i}	Diameter:	375 mm (15 in)
R		230V
15	Watts* @ 50 htz:	42
MOTOR	RPM* @ 50 htz:	1,450
$ \subseteq $	CFM* @ 50 htz	595
	(m3/hr):	(1,010)
	AMPS* @ 50 htz:	0.19
	*Motor data provided by motor manufacturer and is subject to change at anytime	
BULB	Length:	5" or 9" Cell
BL	Wattage:	+9W or +10W
AGES		AIRFLOW
V	Ceilina Heiaht [.]	8m - 12m (26 - 39 ft)

OVERAG	Ceiling Height:	8m - 12m (26 - 39 ft)
/EK	Nozzle Height:	7.5m - 11m (24 - 36 ft)
10	Diameter:	11m - 13m (36 - 43 ft)
R	Floor area:	89m² - 133m² (958- 1,432ft²)
		PURIFICATION
	5" PHI Cell:	PURIFICATION 271m³ (9570 ft³)
	5" PHI Cell: 9" PHI Cell:	

MOTOR

- Single phase, shaded pole, single speed (variable with optional speed control), axial motor.
- Sealed bearings, no lubrication required.

INGRESS PROTECTION

• IP44 Rated.





Airius PureAir PHI Model 45/PS-4 Product Information Sheet

45/PS-4-PA-230V


Page 2 of 3



PROPERTIES

VELOCITY PROFILE

1.5 m— (5 ft)

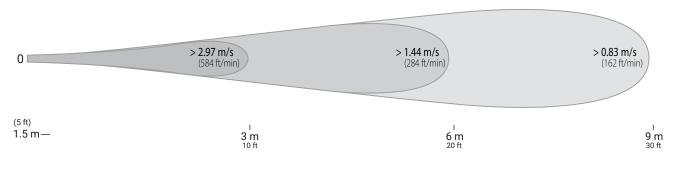

HOUSING & COMPONENTS

- ABS Resin Inc. internal fixed blade stator.
- 5VA flame resistance rating.
- 1.8m (6') steel safety leash cable (fastened to housing).
- Hydrated catalytic matrix cell (Quad-Metallic).
- UV bulb encased in a protective poly tube & entire assembly is encased in a protective metal cell.

OPERATING TEMPERATURES

- Operating Temp = -25°C (-13°F) to 70°C (158°F)
- Thermal shut off = 135°C (275°F)
- Reset = 125°C (255°F)

NOISE LEVEL

• 3 Metres = 0 - 35 dB(A)

COLOUR

- White as standard.
- Can be tailor painted to your colour specifications.

ACCESSORIES & OPTIONS

- Suspended Series kit Allows model 45/PS-4 Airius unit to be mounted in a suspended ceiling grid.
- Speed Controls On/off speed controls allow for variable output from Airius unit. 1 AMP and 5 AMP controls available.

OPERATION

 Designed to operate 24 hours-a-day, 7 days-a-week to protect against airborne mould, bacteria, viruses, odours and VOCs and save heating & cooling costs.

MAINTENANCE

- No maintenance required.
- If the Photohydroionization Cell fails, contact manufacturer.

WARRANTY

- 5 years parts and workmanship from shipping date on fan unit.
- 1 years parts and workmanship from shipping date on Photohydroionization Cell.
- 120 day money back guarantee UK only (T's & C's apply).

SAFETY PRECAUTIONS

• UV bulb is encased in a protective poly tube to prevent any glass or mercury breakage/leakage.



Airius PureAir PHI Model 45/PS-4 Product Information Sheet

45/PS-4-PA-230V

Page 3 of 3




PLACEMENT

PREPARATION

- Install electrical circuit(s) and outlet(s) in accordance with national and local electric codes
- Outlets should generally be mounted vertically unless a "twist/locking" type is being used
- Wall switch may be installed in circuit to disable power and prevent electrical hazards when servicing
- Confirm electrical continuity of Airius unit on the ground before permanently mounting in the ceiling

INSTALLATION

- Hang vertically as high in the ceiling as possible Typically 300mm (12") - 450mm (18") from the roof deck to intake
- The Airius unit performs best when air column from the nozzle is unimpeded to the floor
- Use professionally installed hardware, capable of supporting a minimum of five times the weight
- Hardware to hang the unit includes but is not restricted to: Hooks, chains, cables, carabiners, bridle rings, beam clamps and bolts
- Density of the placement is directly related to the effectiveness, performance and savings
- Mount out of reach from people and animals
- Floor plans, mezzanines, office locations, machinery, people placement, plumbing, lighting, duct work, electrical systems, natural light/air systems, cranes, doors, windows, ventilation and fire suppression systems are all factors in properly locating the Airius system within the ceiling
- Units must have a clearance distance between PHI cell and occupants of 30cm for 5 inch cell and 60cm for 9 inch cell
- Ensure UV safety goggles are worn when handling unit

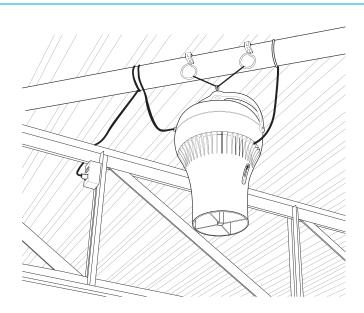


OPERATION

- Designed to operate 24 hours-a-day, 7 days-aweek to maintain thermal equalization/humidity equalization
- Use optional speed control to fine tune RPM if needed

MAINTENANCE

- Frequency of cleaning will vary by application and environment
- You may clean the plastic housing with a damp warm cloth, using mild household detergents
- Do not use petroleum products, thinners or solvents to clean any part of the Airius unit
- If the Airius unit fails, contact manufacturer





PC/ABS

Airius LLC, © 2011. All Rights Reserved.